



## Number Lock operating instructions

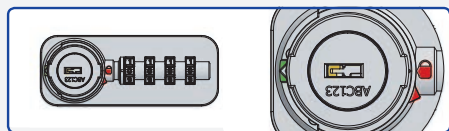


Unlocked position.  
When setting a code, always start with lock in an unlocked position.

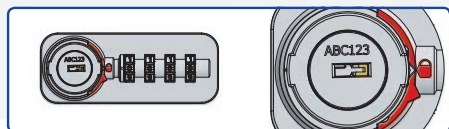

Locked position.



### Locking the door

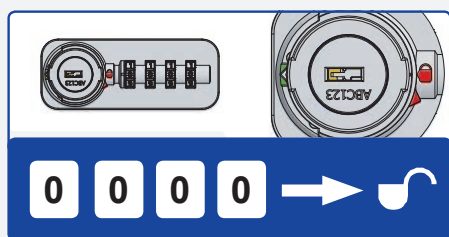

All digits set to "0", the lock is unlocked.




  Set your personal code.




Close the lock by turning it 180° to the left.  
Code is automatically scrambled.

### Opening the door

 

 Set your personal code.  
Open the lock by turning it 180° to the right.



Code is automatically scrambled.




A new code can be set by the next user.


## Emergency opening without code reset



 All digits set to "0", the lock is locked.



 Insert the emergency key available from the building management.



Turn the key to the right until you hear a "click". The lock is still locked.



 
Turn the key 180° to the left. The lock is still locked.



Turn the knob to the right as far as it will go. The lock is now unlocked.



Turn the knob 180° to the left. The lock is locked again.




Remove the emergency key.



All digits set to "0", the lock is locked.


## Emergency opening with code reset

 

All digits set to "0", the lock is locked.



 Insert the emergency key available from the building management.



Turn the key to the right until you hear a "click".  
Lock is still locked.



 
Turn the dials 1 - 4 one after the other 360° starting from the knob.



Turn the key 180° to the left.  
Lock is still locked.



Turn the knob to the right as far as it will go.  
The lock is now unlocked.



Remove the emergency key.



Access code is now erased and the lock can be programmed again.

Go to [www.isku.com/fi/locks](http://www.isku.com/fi/locks)  
for further instructions

**ISKU**  
Since 1928